

3-1. Using the touch screen

Touch screen


By touching the screen with your finger, you can control the audio system and air-conditioning, adjust the screen display etc.

► Vehicles with navigation system



► Vehicles without navigation system



The "Information" screen shown in the above illustration is displayed when the  is pressed.

Switches	Page
"CLIMATE"	P.192
"AUDIO"	P.200
"INFO" (Displaying the "Information" screen)	P.184
"DISP" (Adjusting the display)	P.188
Trip Information. (Displaying the "Trip Information" screen)	P.6
Maintenance	Navigation System Owner's Manual
Telephone	P.265
Calendar	Navigation System Owner's Manual
"LEXUS Park Assist"	P.155
Language	P.187
Screen Setting	P.190
Adjust Clock	P.314/ Navigation System Owner's Manual

The initial screen



If the power switch is set to "ACC" or "IG-ON" mode, the initializing screen will be displayed for a few seconds as the system starts up.

3-1. Using the touch screen

n **To avoid damaging the touch screen**

- l Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- l Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

n **When using the touch screen**

- l If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- l The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen or remove your sunglasses.

3-1. Using the touch screen


Setting the touch screen

You can change the touch screen to your desired settings.


Language settings

The language used for all voice guidance, messages and touch screen switches may be changed.

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Select the desired language.

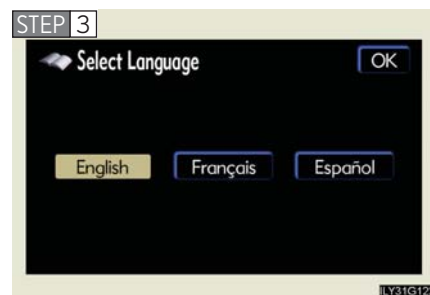


STEP 4 Touch .

Turning off the beep sound

The beep that sounds when a touch screen button is touched can be turned off.

STEP 1 Press .

STEP 2 Touch .

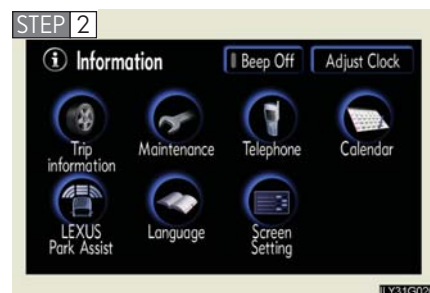

3

Interior features

3-1. Using the touch screen

Adjusting the display

STEP 1 Press **DISP.**

STEP 2 Adjust the display as desired using **R / -** and **G / +**.

If you do not touch the screen for 20 seconds, the system will return to the previous screen.

► Vehicles with CD player



► Vehicles with DVD player



	R / -	G / +
Color	Red	Green
Tone	Lighter	Darker
Contrast	Weaker	Stronger
Brightness	Darker	Brighter

n “Day Mode”



When the headlights are turned on, the screen dims. However the screen can be switched to “Day Mode”.

The screen will stay in “Day Mode” when the headlights are turned on until **Day Mode** is touched again.

If the instrument panel light control is set to “MAX”, “Day Mode” is not displayed.


n To turn off the picture display

If **Screen Off** is touched, the screen display is turned off, and guidance is by voice only.

3-1. Using the touch screen

Screen settings

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.
The following screen settings can be changed.



1 Automatic transition

20 seconds after air-conditioning or audio system use, the system will return the display to the previous screen.

2 Switch color

You can select the switch color.

3 Delete personal data

The following personal data is deleted:

- User selection settings
- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code
- Maintenance conditions*
- Maintenance information "off" setting*
- Memory points*
- Areas to avoid*
- Previous points*
- Route trace*

*: If the navigation system is equipped

n **Setting automatic transition**

STEP 1 Touch **ON** or **OFF**.

STEP 2 Press **OK**.


n **Setting the switch color**

STEP 1 Touch **Blue** or **Gold**.

STEP 2 Press **OK**.

n **To delete personal data**

STEP 1 Touch the **Delete personal data**.

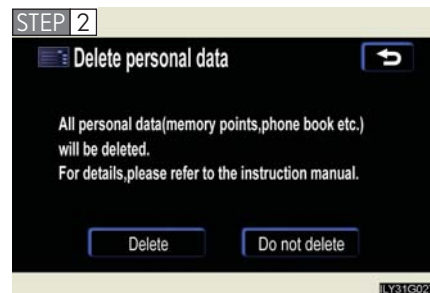

Touch **Delete**.

Check carefully beforehand, as data cannot be retrieved once initialized.

3

Interior features

n **When deleting personal data**

Data can only be deleted when the vehicle is stopped.

n **When selling the vehicle**

Be sure to initialize both the call history and personal data. (→P.190)

n **If you touch the**

The display returns to the previous screen.